

\*Installer: Leave instructions behind for the occupant & owner.

Remove window guard only in case of an emergency or if testing release mechanisms. Release mechanism and releasable window guard should be tested once a month to ensure proper operation. All household members 6 years and older should know how to operate the release mechanism in case of an emergency. Window guard must be re-installed into window frame after removing (see directions below). Be sure to check guard is securely locked into both posts.



**Step 1**  
Locate all emergency release buttons indicated by labels.



**Step 2**  
Press both buttons simultaneously on one end. Hold down & slide bars toward the center of the window. Repeat on other end.



**Step 3**  
Remove sliding bars from end posts.

**To Re-install:** Hold sliding bars so emergency release labels are facing you. Place bars into the holes of one of the posts while pressing emergency release buttons and slide completely into holes. Press emergency release buttons on other end and slide bars into the holes. (If the bars do not fit into the holes, you may be putting the wrong end into the post). Pull on unit from all sides to be sure it is locked into both posts securely.